

# Instructions: Replacing a Pump Head


Cyclehoop's Public Bike Pumps require general maintenance.

The pump heads wear out over time and become damaged from improper use. As demonstrated below, replacing a pump head is a simple process and replacement pump heads cost £10 each.

The frequency of replacing the pump head varies depending on local usage from once a month to once every 3 months.

Cyclehoop provides service contracts to perform all maintenance duties. A member of our installation team will look after all aspects of maintenance to ensure the public pump is fully operational.

Please follow the four steps to replace the pump head.

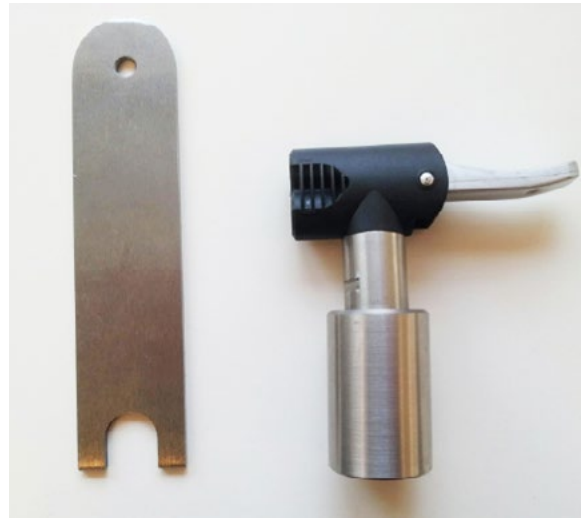

Step 1: Pump head and spanner.



Step 2: Hold the pump head and fit spanner into the grooves.



Step 3: Unscrew the pump head.



Step 4: Repeat the process the screw in the replacement pump head.